# **Littelfuse Protection Relays**

**Resistance Grounding** 



# SE-330 NEUTRAL-GROUNDING-RESISTOR MONITOR GUIDEFORM SPECIFICATION

Grounding-resistor monitoring shall be provided by a Littelfuse Startco SE-330 Neutral-Grounding-Resistor Monitor. The microprocessor-based flash-upgradable NGR monitor features are:

#### **IEEE Device Numbers:**

50/51G, 50/51N, 59N, 86

# **Protective Functions:**

- Grounding-resistor failure continuously monitors for NGR failure
- Ground fault

#### Inputs:

- Current transformer (CT) 1-A and 5-A secondary, and sensitive (50-mA secondary)
- ER-series sensing resistor
- Remote reset
- Pulse enable

#### **Outputs:**

- Contacts
  - Trip/Pulse Form A (fail-safe or non-fail-safe) or pulsing operation
  - Ground-Fault Trip Form C (latching or non-latching, fail-safe or non-fail-safe)
  - Resistor-Fault Trip Form C (latching or non-latching, fail-safe or non-fail-safe)
  - Indication Form A or Form B (unit-healthy indication)
- 4-20 mA Analog indicates earth-leakage current

### **Communications:**

- mini-B and USB local communications
- Optional network communications
- microSD™ card slot

# Indication:

- Green power-on LED
- Red ground-fault-trip LED
- Red resistor-fault-trip LED
- Yellow trip-relay-state LED
- Green calibrated LED
- Red diagnostic LED

#### **Settings:**

- Ground-fault-trip levels: 1 to 100% of CT rating
- Ground-fault-trip time: 0.1 to 10.0 s
- Neutral-voltage-trip level: 20 to 10,000 V ac
- Pulse period: 1.0 to 3.0 sHarmonic filter: 50 or 60 Hz

# **Mounting:**

- Surface
- Panel

1