

## DCNLEV50 Series High Current High Voltage DC Contactor Relays



Side Mount

Bottom Mount

<b>Amperage:</b>	50A Continuous Carry
<b>Housing:</b>	Nylon UL 94-V0
<b>Voltage Rating:</b>	900V
<b>Output Connectors:</b>	M5 Bolt and Lockwasher Connections
<b>Connectors:</b>	Wire Leads for Control Circuit
<b>Operating Temperature:</b>	-40 to 85°C
<b>Circuitry:</b>	SPST NO
<b>Voltage:</b>	<b>B:</b> 12V DC Nominal, 8-16V DC Working <b>C:</b> 24V DC Nominal, 16-28V DC Working <b>E:</b> 48V DC Nominal, 33-52V DC Working
<b>Max Coil Inrush Current:</b>	<b>B:</b> 461mA Max to Coil <b>C:</b> 250mA Max to Coil <b>E:</b> 122mA Max to Coil
<b>Mounting:</b>	M4 with Compression Limiters
<b>Size:</b>	46mm x 58mm x 41mm
<b>Mounting Bolt Torque:</b>	2.3 Nm (20 in-lb)
<b>Contact Torque:</b>	3.4 - 4.5 Nm (30 - 40 in-lb)
<b>Terminals:</b>	M5 Silver Plated Copper
<b>Approvals:</b>	UL File No. E510407

Download 2D print and technical resources at:  
**[littelfuse.com/DCNLEV50](http://littelfuse.com/DCNLEV50)**

For DCN Series Contactor Relays with polarized terminals, it is important to ensure that the positive input from the power source is connected to the + (positive) terminal and the load is connected to the – (negative) terminal. Incorrect connections can greatly affect the expected life of the contactor relay. DCN Series Contactor Relays with non-polarized terminals may have the power source and load connected to either terminal.

- 1. Prepare the Work Area** - It is always advisable when working with electricity to take caution and turn off any power unit you may encounter while installing any electrical device.
- 2. Mount the Contactor** - Mount the contactor using the mounting hardware that is supplied with the contactor or the recommended fasteners.
- 3. Prepare the Wiring and Connect the Control Wires** - Strip all the wires that will be connected to the control coil and the contactor terminations with a wire stripper. Remove approximately ½ inch of the wire's insulation to expose the bare copper wire. Connect the control wires to the coil solenoid first, white wires on contactor. When installing the wires, be sure that a good electrical connection is made by using an appropriate electrical connector. Do not allow any loose strands to short against any equipment and cause electrical damage.
- 4. Connecting the Switched Power Wires** - Verify the switched contacts are open, no continuity between terminals "A1" and "A2." Using the hardware that is supplied with the contactor or the recommended fasteners, connect the Line power feed wire to the contactor terminal marked "A1." Connect the Load power output wire to the contactor terminal marked "A2." As with the control wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.
- 5. Connecting the Switched Auxiliary Contact Wires** - If an Auxiliary Contact is provided, connect the low power Line feed wire to one of the black wires and the low power Load output wire to the remaining black wire. When installing the wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.

[illegible]

# Installation Instructions


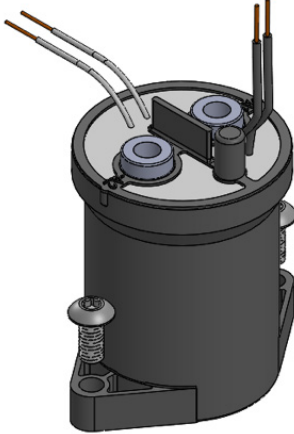
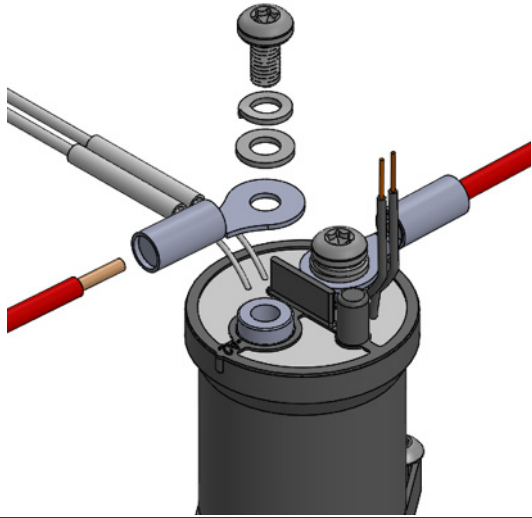
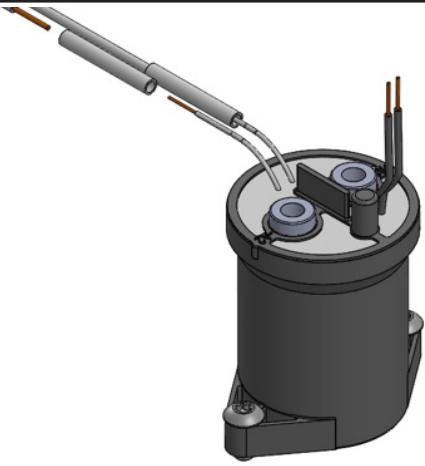
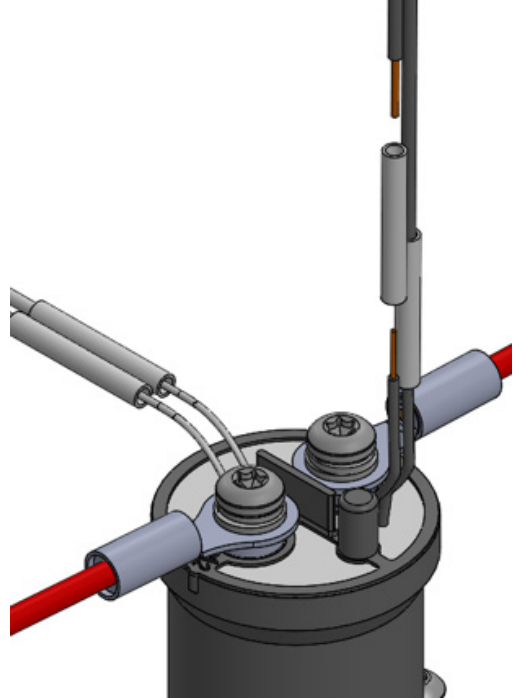
## DCNLEV50 Series High Current High Voltage DC Contactor Relays

Part Numbers: DCNLEV50-BS, DCNLEV50-BSN, DCNLEV50-B, DCNLEV50-BN, DCNLEV50-BAS, DCNLEV50-BASN, DCNLEV50-BA, DCNLEV50-BAN, DCNLEV50-CS, DCNLEV50-CSN, DCNLEV50-C, DCNLEV50-CN, DCNLEV50-CAS, DCNLEV50-CASN, DCNLEV50-CA, DCNLEV50-CAN, DCNLEV50-ES, DCNLEV50-ESN, DCNLEV50-E, DCNLEV50-EN, DCNLEV50-EAS , DCNLEV50-EASN, DCNLEV50-EA, DCNLEV50-EAN



Expertise Applied | Answers Delivered

Figure 2 - Step by Step Installation

	 <b>DANGER</b>	
STEP 1	<b>Electrical Hazard</b> <b>Turn Off Power Before Servicing</b>  It is always advisable when working with electricity to take caution and turn off any power unit you may encounter while installing any electrical device.	
STEP 2	  Mount the contactor using the mounting hardware that is supplied with the contactor or the recommended fasteners.	STEP 4   Verify the switched contacts are open, no continuity between terminals "A1" and "A2." Using the hardware that is supplied with the contactor or the recommended fasteners, connect the Line power feed wire to the contactor terminal marked "A1." Connect the Load power output wire to the contactor terminal marked "A2." As with the control wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.
STEP 3	  Strip all the wires that will be connected to the control coil and the contactor terminations with a wire stripper. Remove approximately 1/2 inch of the wire's insulation to expose the bare copper wire. Connect the control wires to the coil solenoid first, white wires on contactor. When installing the wires, be sure that a good electrical connection is made by using an appropriate electrical connector. Do not allow any loose strands to short against any equipment and cause electrical damage.	STEP 5   If an Auxiliary Contact is provided, connect the low power Line feed wire to one of the black wires and the low power Load output wire to the remaining black wire. When installing the wires, be sure that a good electrical connection is made. Do not allow any loose strands to short against any equipment and cause electrical damage.